 


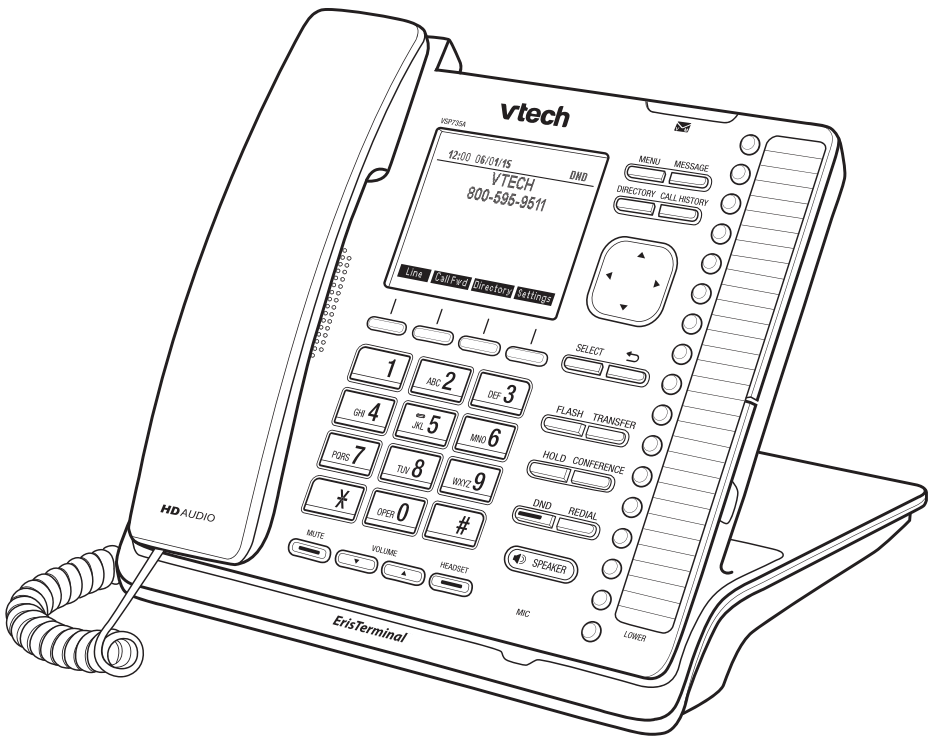

ErisTerminal® SIP Deskset

VSP735A

Quick Start Guide



Important Safety Information



This symbol is to alert you to important operating or servicing instructions that may appear on the product or in this user's manual. Always follow basic safety precautions when using this product to reduce the risk of injury, fire, or electric shock.

Important Safety Instructions

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

1. This product should be installed by a qualified technician.
2. This product should only be connected to the host equipment and never directly to the network such as Public Switch Telephone Network (PSTN) or Plain Old Telephone Services (POTS).
3. Read and understand all instructions.
4. Follow all warnings and instructions marked on the product.
5. Unplug this product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
6. Do not use this product near water such as near a bath tub, wash bowl, kitchen sink, laundry tub or swimming pool, or in a wet basement or shower.
7. Do not place this product on an unstable table, shelf, stand or other unstable surfaces.
8. Slots and openings in the back or bottom of the telephone base and handset are provided for ventilation. To protect them from overheating, these openings must not be blocked by placing the product on a soft surface such as a bed, sofa or rug. This product should never be placed near or over a radiator or heat register. This product should not be placed in any area where proper ventilation is not provided.
9. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supplied at the premises, consult your dealer or local power company.
10. Do not allow anything to rest on the power cord. Do not install this product where the cord may be walked on.
11. Never push objects of any kind into this product through the slots in the telephone base or handset because they may touch dangerous voltage points or create a short circuit. Never spill liquid of any kind on the product.

12. To reduce the risk of electric shock, do not disassemble this product, but take it to an authorized service facility. Opening or removing parts of the telephone base or handset other than specified access doors may expose you to dangerous voltages or other risks. Incorrect reassembling can cause electric shock when the product is subsequently used.
13. Do not overload wall outlets and extension cords.
14. Unplug this product from the wall outlet and refer servicing to an authorized service facility under the following conditions:
 - A. When the power supply cord or plug is damaged or frayed.
 - B. If liquid has been spilled onto the product.
 - C. If the product has been exposed to rain or water.
 - D. If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operation instructions. Improper adjustment of other controls may result in damage and often requires extensive work by an authorized technician to restore the product to normal operation.
 - E. If the product has been dropped and the telephone base and/or handset has been damaged.
 - F. If the product exhibits a distinct change in performance.
15. Avoid using a telephone (other than cordless) during an electrical storm. There is a remote risk of electric shock from lightning.
16. Do not use the telephone to report a gas leak in the vicinity of the leak. Under certain circumstances, a spark may be created when the adapter is plugged into the power outlet, or when the handset is replaced in its cradle. This is a common event associated with the closing of any electrical circuit. The user should not plug the phone into a power outlet, and should not put a charged handset into the cradle, if the phone is located in an environment containing concentrations of flammable or flame-supporting gases, unless there is adequate ventilation. A spark in such an environment could create a fire or explosion. Such environments might include: medical use of oxygen without adequate ventilation; industrial gases (cleaning solvents; gasoline vapors; etc.); a leak of natural gas; etc.
17. Only put the handset of your telephone next to your ear when it is in normal talk mode.
18. The power adapters are intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outlet.

19. Use only the power cord indicated in this manual.
20. For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible.
21. In wall mounting position, make sure to mount the telephone base on the wall by aligning the eyelets with the mounting studs of the wall plate. Then slide the telephone base down on both mounting studs until it locks into place. Refer to the full instructions in **Deskset Installation** in the User Guide.
22. CAUTION: Keep small metallic objects such as pins and staples away from the handset receiver.

SAVE THESE INSTRUCTIONS

Declaration of Conformity

Hereby, VTech declares that this VSP735A is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.



About this Guide

This quick start guide provides a reference for the external features of the phone and basic installation instructions.

 
Please refer to the VSP735A Deskset User Guide for complete installation and operation instructions. For customer service or warranty service, please contact our regional offices or distributors in the country or region where you purchased your product.

Parts Checklist

Your telephone package contains the following items. Save your sales receipt and original packaging in the event warranty service is necessary.




Quick Start Guide

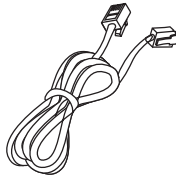

Ethernet cable



 
Replacement key label card

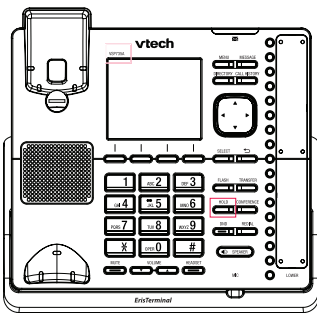

Deskset base



 Deskset stand

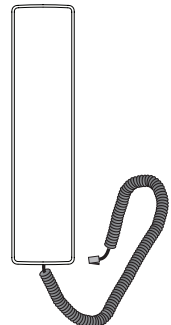

Handset and handset cord

Note: If you do not connect the deskset to a PoE-capable network router or switch, please purchase a compatible 5 Vdc, 1000 mA power adapter from your distributor or dealer.

Quick Reference Guide

SCREEN

Displays call information, soft key labels, and deskset menus.

MENU

Press to display the deskset menu.

MESSAGE WAITING indicator

Flashes when you have a new voice message.

MESSAGE

Press to display the message menu.

CALL HISTORY

Press to view caller ID information.

DIRECTORY

Press to view directory information.

SOFT KEYS

 
Perform the actions indicated by the on-screen labels.

SELECT

Press to select a menu item or save an entry or setting.

CANCEL

While in a menu, press to cancel an operation and exit the menu.

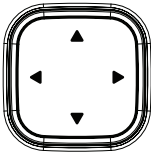


NAVIGATION KEYS

While in menus, press ▼ or ▲ to scroll through the menu, highlight items or change settings. While entering names, numbers or other text, press ◀ or ▶ to move the cursor left or right.

Quick Reference Guide

 External Features

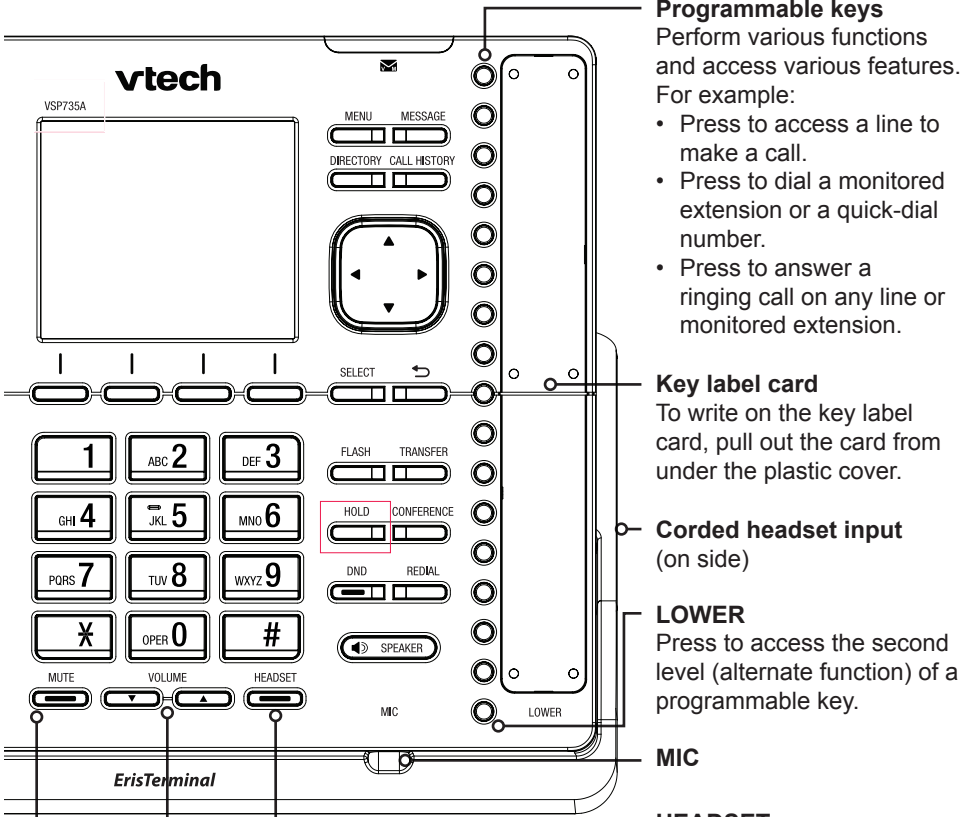

MUTE

During a call, press to mute the microphone.

- VOLUME +

- During a call, press to adjust the listening volume.
- During message playback, press to adjust the playback volume.
- When the phone is idle, press to adjust the ringer volume.

FLASH

During a call, press to answer an incoming call when you receive a call waiting alert.

HOLD

Press to put an outside call on hold.

DND

Press to enter do-not-disturb mode.

TRANSFER

Press to transfer a call to an extension.

CONFERENCE

Press to add another extension or outside line to an existing call.

REDIAL

Press to view list of previously dialed numbers.

SPEAKER

Press to turn the speakerphone on or off.

Deskset Installation

This section assumes that your network infrastructure is established and that your IP PBX phone service has been ordered and configured for your location. For more information about installation options and phone setup, see the VSP735A Deskset User Guide and the VSP735A Deskset Administrator and Provisioning Manual.

You can power the phone using a compatible VTech power adapter (purchased separately from your distributor or dealer) or using Power over Ethernet (PoE) from your network. (The phone requires PoE Class 3.) If you are not using PoE, install the phone near a power outlet not controlled by a wall switch. The phone can be placed on a flat surface or vertically mounted on the wall.

Avoid placing the deskset too close to:

- Communication devices such as television sets, DVD players, or other cordless telephones
- Excessive heat sources
- Noise sources such as a window with traffic outside, motors, microwave ovens, refrigerators, or fluorescent lighting
- Excessive dust sources such as a workshop or garage
- Excessive moisture
- Extremely low temperature
- Mechanical vibration or shock such as on top of a washing machine or work bench.

Note: The Deskset shall be installed and used such that parts of the user's body other than the hands are maintained at a distance of approximately 20 cm (8 inches) or more.

Installing the phone




Make sure you plug in the Ethernet cable before powering up the phone.


1. Attach the stand.
 - a. Lift the kickstand and flip it back. Let it rest at its maximum angle.



 
- b. Snap the stand onto the two snap points on the deskset base.
2. Plug the end of the coiled handset cord into the jack on the left side of the telephone.

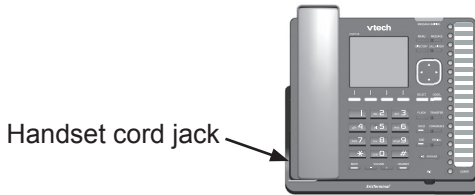

 
- b. Snap the stand onto the two snap points on the deskset base.
3. Lift the deskset base to the desired angle. There are three pairs of grooves designed to hold the phone at different angles for optimum visibility.
4. Snap the kickstand into the desired grooves and lock it into place.

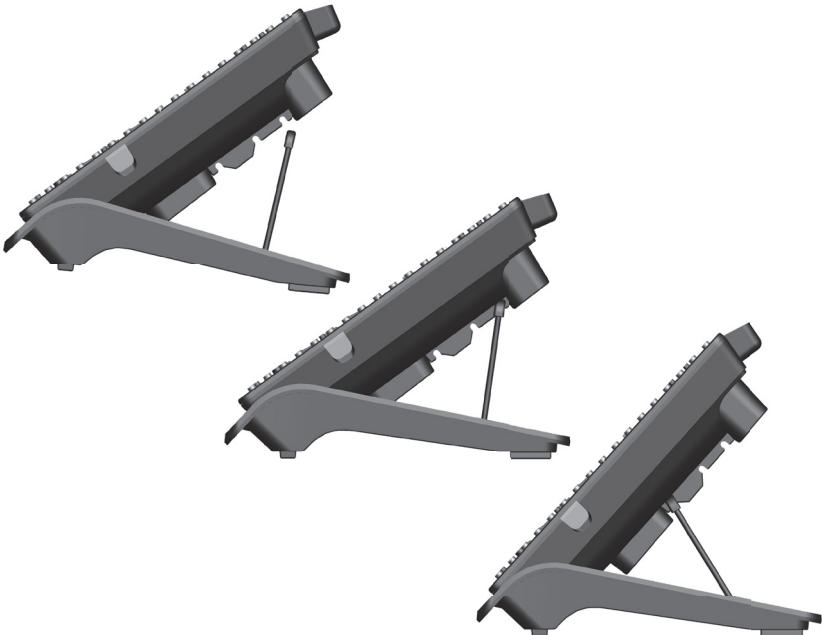

5. Plug one end of the Ethernet cable into the Ethernet port on the rear of the deskset (marked by ) , and plug the other end of the cable into your network router or switch.

If the deskset is not using power from a PoE-capable network router or switch:

 - a. Connect a compatible VTech power adapter to the deskset power jack.
- b. Plug the power adapter into an electrical outlet that is not controlled by a wall switch.

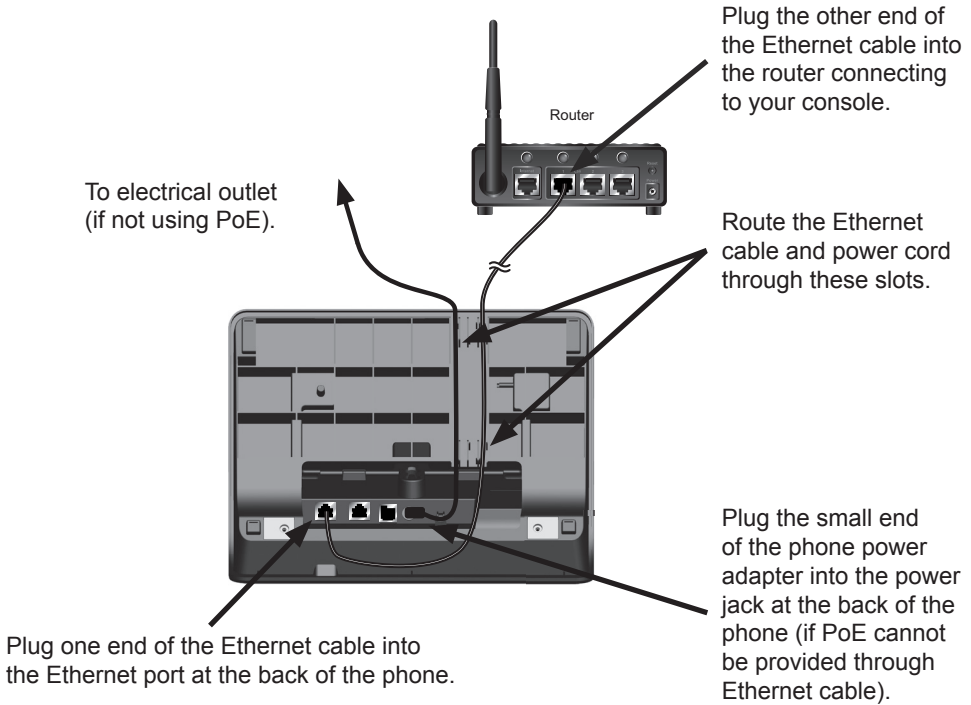

IMPORTANT INFORMATION

1. Use only a compatible VTech power adapter (purchased separately from your distributor or dealer).
2. The power adapter is intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outlet.

 
If there is a networked computer and no extra Ethernet wall ports near the phone, then the phone and PC can share the same network connection.

 
To share a network connection with a PC:

1. Plug a Cat.-5 Ethernet cable into the PC port on the phone (marked by **PC**).
 2. Plug the other end of the Cat.-5 Ethernet cable into your computer's Ethernet port.
- If a PC is connected to your network through a phone, any phone resets and power or network interruptions will disrupt the PC's connection to the network.


To mount the phone on the wall

1. Prepare the wall-mount screws. The deskset will fit onto wall-mount screws with centers 8.2 cm (3 ¼ inches) or 10.2 cm (4 inches) apart. Most standard wall plates have screw centers 8.2 cm (3 ¼ inches) apart.
2. If the deskset stand is attached, detach the stand.
 - a. Lift the phone front panel to release the kickstand from the grooves.
 - b. Snap the stand off the two snap points on the deskset base.
3. Put the corded handset aside. Use a coin to rotate the handset tab 180 degrees. The protruding edge holds the corded handset when the phone is mounted on the wall.

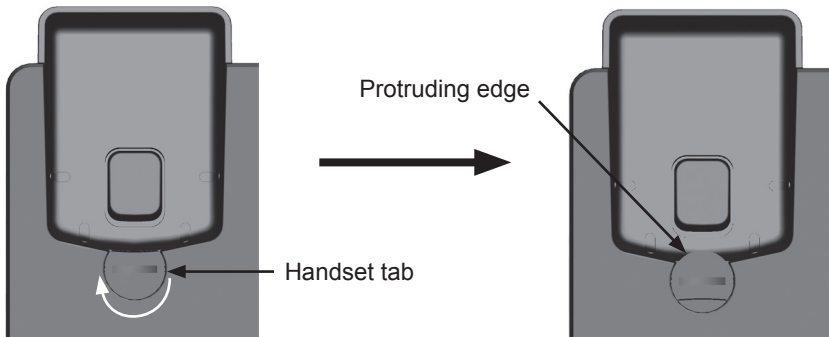

4. Plug one end of the Ethernet cable into the Ethernet port on the rear of the deskset (marked by ).
5. If the deskset is not using power from a PoE-capable network router or switch, connect a compatible VTech power adapter to the deskset power jack.

 - Align the upper wall mounting hole on the back of the phone with the upper tab of the standard wall plate. Make sure the lower wall mounting hole on the mounting bracket also aligns with the lower tab of the standard wall plate. Push the phone down until it clicks securely in place.

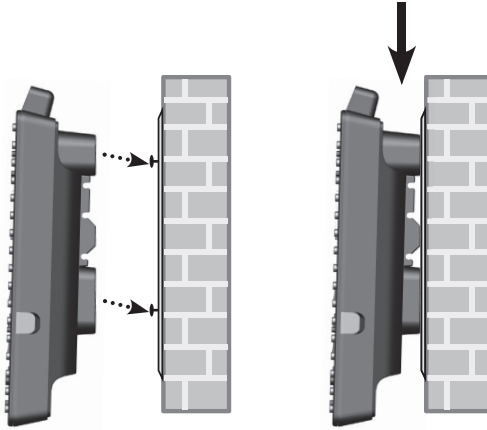

- Bundle the Ethernet cable and power adapter cord neatly with twist ties.
- Plug the Ethernet cable into the router your console is connected to and the power adapter into an electrical outlet not controlled by a wall switch if you are not using PoE.

Wall mount to tabletop installation

To change the phone from the wall mount position to tabletop position, follow the steps below.

- If the Ethernet cable and power adapter cord are bundled, untie them first.
- Push the phone up to remove it from wall. Unplug the Ethernet cable from the router and the power adapter from the power outlet.
- See “Installing the phone” on pages 10 to 12.



Technical Specifications

RF frequency band	1881.792–1897.344 MHz
Channels	10
Operating temperature	32–122 °F (0–50 °C)
AC adapter output voltage	5.1 Vdc @ 1.7 A
Ethernet network ports	GigE RJ-45 ports

United Kingdom

Tel: +44 (0) 1706 694070

Email: support_ukbusinessphones@vtech.com

Website: www.ukbusinessphones.vtech.com

Middle East

Tel: +97142880786

Email: support@exceldistribution.co

Website: www.mebusinessphones.vtech.com

VTech Telecommunications Ltd.

A member of THE VTECH GROUP OF COMPANIES.

VTech is a registered trademark of VTech Holdings Limited.

ErisTerminal® is a registered trademark of VTech Communications Inc., registered in the United States.

Specifications are subject to change without notice.

Copyright © 2015 for VTech Telecommunications Ltd. All rights reserved.

Printed in China. Version 3, 08/15